


Liquid Boomless Sprayer with Centrifugal Pump

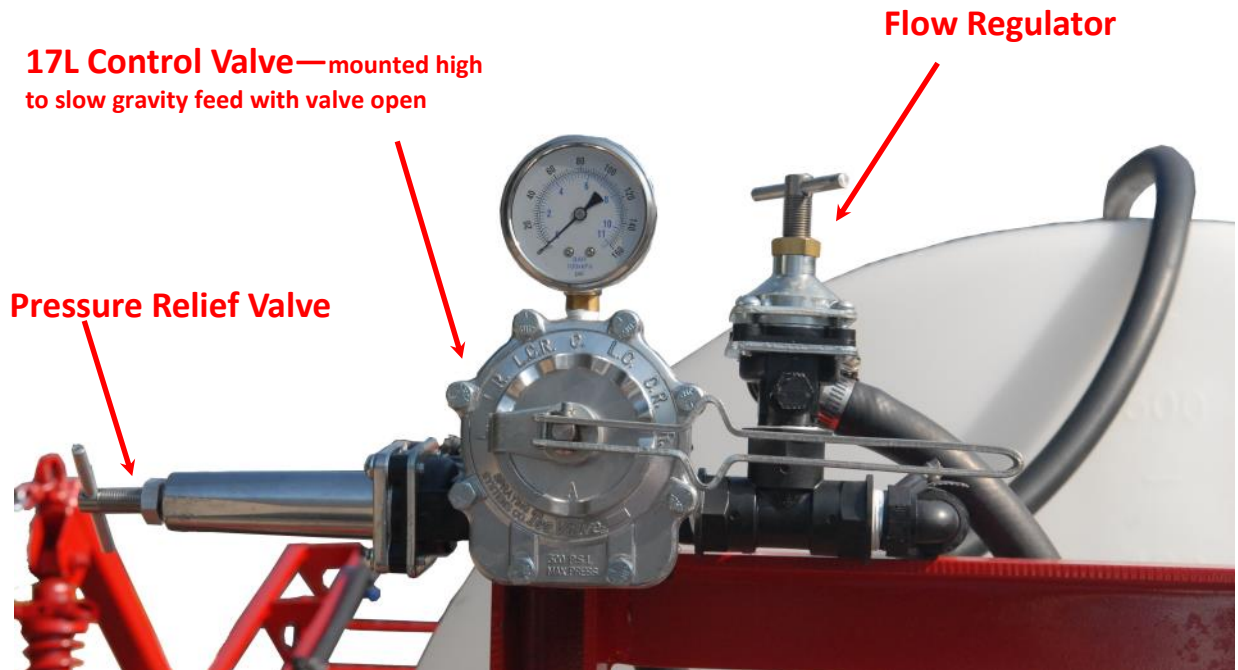

Pressure Relief Valve (PRV) moves in and out
Move IN for
Move OUT for

Control Valve (CV) handle is straight out when ON .
In the above photos the CV is in the OFF position.

Flow Regulator (FR)
Set at Maximum Flow

Agitation

Churns water & chemical to uniform mixture

CV closed position
PRV Adjust to maximum above 40 PSI—lock down with lock nut
FR Adjust open—lock down with lock nut

Spraying with Boomless Nozzles

Select spray pressure

Set angle of nozzle to match desired spray width

CV closed position
PRV Adjust to maximum above 40 PSI—lock down with lock nut
FR Adjust open—lock down with lock nut